

Two control options are available for roller blinds

A. Chainless Operation

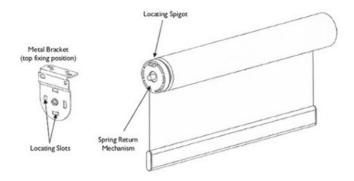

B. Side Chain Operation (left or right positioning)

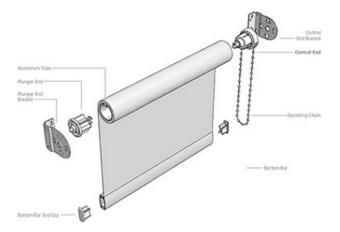

Notice: before fitting the blinds make sure the surface is perfectly leveled and that no obstructing objects such as handles prevent the fabric from hanging properly.

To determine the position of the brackets, add 35mm to the width of the blind. Install the brackets by measuring their position from the outside of the brackets.

Fig A. Metal brackets for chain operated rollers



Fig B. Metal brackets for chainless rollers




A. Side Chain Operated Roller blinds

INSTALLING THE BLIND

A1. INSTALLING THE BRACKETS


Measure the fixing distance as described above and fit the brackets against the wall or the door frame

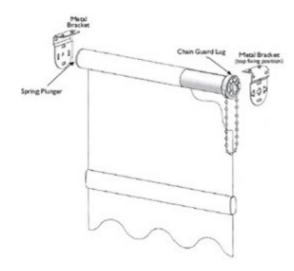

A2. INSTALLING THE BLIND

After installing the brackets, position the blind with the fabric hanging at the back and fit the spring plunger, depressing the plunger as the blind is pushed into the brackets.

Make sure the chain guard lug is at the top and that the locating hook is positioned downwards and position the hook into the vertical part of the cross shaped aperture inside the bracket, allowing the hook to drop until it is placed inside the bracket.

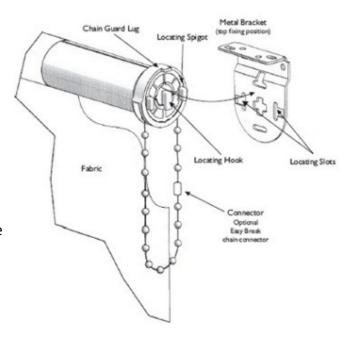

A3. INSTALLING THE TIE DOWN CLEAT

Position the tie down cleat against the wall so as to completely stretch the chain. Secure the chain around the device making sure it does not hang freely. Screw the tie down cleat into place.



A4. INSTALLING THE EASY CHAIN BREAK CONNECTOR

The connector is only provided on blinds supplied with white chain operation.

Upon fitting the blind make sure the chain is unreachable for children by shortening it if necessary, cutting part of it and connecting the lose ends with the Easy Chain Break Connector.



The Chain Break Connector works on a simple principle: when applying pressure on the chain, the connector breaks, releasing the loop formed by the chain.

The new system we have introduced in our blinds features two connectors, ensuring that one of the break connector will always by in vertical position ready to perform as intended.

Every blind we produce is supplied with a child safety warning tag.

A5. OPERATING THE BLIND

Operate the side controllers and position the fabric at the desired opening.


B. Chainless Roller blinds

INSTALLING THE BLIND


B1. INSTALLING THE BRACKETS

We can supply brackets for face fix or top fix.

Face Fix Brackets and Installation

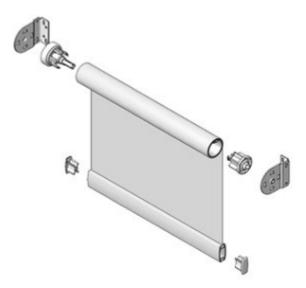

Top Fix Brackets and Installation

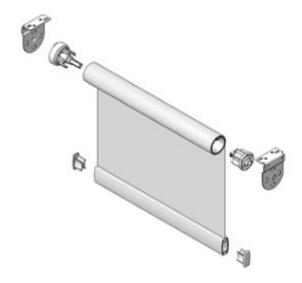


B2. INSTALLING THE BLIND

Completely roll the fabric onto the roller and fit the spring plunger into the right hand bracket by pushing the roll to the right and depressing the spring plunger. Position the spigot at the lowest slot into the left bracket and clip it into the bracket.

Notice: it is imperative that the spigot is positioned at the lowest slot into the bracket.

 
The roller blind is supplied with a SR locking unit that keeps the blind in the right tension during transit and fitting. The SR locking unit is a pin that when depressed LOCKS and PREVENTS the roll from spinning and losing its spring tension.





 Upon fitting the blind, disengage the pin in order to correctly operate the blind.






Notice: In case of roller blinds with top cassette, open the cassette fascia to gain access to the pin.



B2. TENSIONING THE SPRING

Notice: In case the blind operates improperly after fitting, apply a greater spring tension following the next steps:

- 1. Pull the blind 250mm from its uppermost position and lock it off.
- 2. Remove the blind from the brackets and manually roll the fabric on the roll.
- 3. Fit the blind back into the brackets and check again the tension.
- 4. Repeat steps 1 to 3 in case the tension is still insufficient.

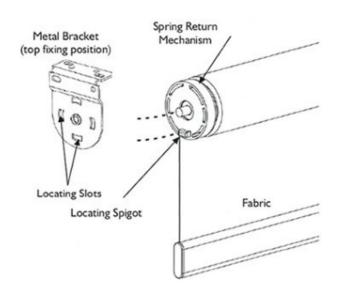

B5. OPERATING THE BLIND

When operating the blind always hold on to the bottom bar or the toggle of the blind. RELEASING THE BLIND WILL CAUSE THE FABRIC TO ROLL ALL THE WAY UP.

Release the spring lock by pulling the toggle of the blind a few inches. After deciding on the fabric position, lock the spring back in place.


NEVER ROTATE THE SPRING END AS THIS WILL RELEASE THE TENSION AND CAUSE THE BLIND TO OPERATE IMPROPERLY.

Fitting Guidelines for Roller Blinds With Top Cassette

The top cassette is installed using face or top fix brackets. A sufficient number of brackets will be supplied on every blind.

Fit the brackets at a minimum of 75mm from each end of the cassette and install intermediate brackets at equal distances between the first two.

After positioning the bracket release lip at the back of the blind and while keeping the cassette tilted away from you, fix the cassette into the brackets.

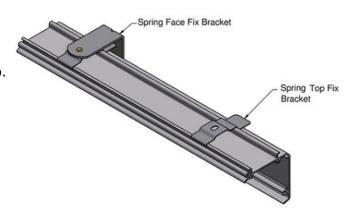

INSTRUCTIONS FOR REMOVING ROLLER BLINDS WITH TOP CASSETTE

Push the protruding release lip on the brackets while holding on to the cassette and release it from the brackets.