

Fitting instructions for Roman Blinds

WARNING!

Children and vulnerable individuals are the most at risk of strangulation caused by chains and loops. ALWAYS use the provided child safety device (cord cleat for cord operated) and make sure it is in place at all times and that it functions correctly.

The cords at the back of roman blinds are always exposed, thus ensure that children cannot reach them and supervise them carefully.

NEVER use roman blinds for a room where children might be left unsupervised (bedroom, playroom).



Cord Operated

Parts Supplied

Headrail



Brackets



 
Child Safety Device
(Cord Cleat)




Installing the headrail

Mark the position of the cord guides by placing the blind against the window. Make sure that the brackets do not come in contact with the cord guides and that you clear all handles and other obstructions before installing the brackets. This ensures that the blind hangs freely and operates accordingly.

The brackets can be mounted by using the hole at the back for face fixing or the one at the top for top fixing.

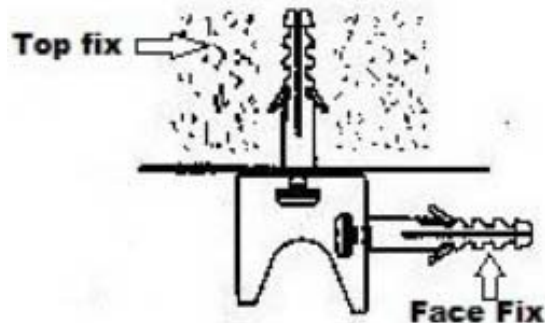

 To insert the headrail/blind, you need to push it into position (A) and close the lever attached to each bracket. In order to take it off, these levers need to be released individually.

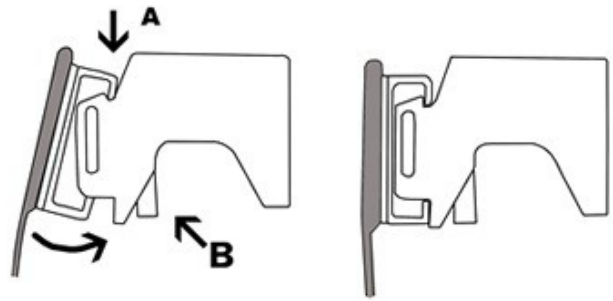


The blind is operated by pushing the cords outwards for release and towards the centre for locking in place. The automatic cord lock ensures that the blind locks in any possible position.

Please make sure that the strings of the blinds are entirely equal should the blind not operate evenly. In case they are not, they can be easily adjusted from the cord connector at the bottom of the cord.

Child Safety

 Ensure child safety! All blinds are delivered with back cord breakaway clips and cord cleats which need to be installed.

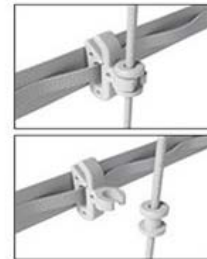

1. Position the cord cleat(s) as close to the headrail as possible but no less than 1.5 m from the floor.
2. Mark position then drill holes and fix the device(s) into place using wall plugs if necessary.
3. Ensure that when the blind is fully raised, the entire length of the cord can be accumulated around the cord cleat.

NOTE: Blinds over 1500mm in drop might require 2 cord cleats. If so, they will be provided upon delivery. Never install them at more than 200mm apart.



Fitting Instructions for Deluxe Headrail

WARNING!

Children and vulnerable individuals are the most at risk of strangulation caused by chains and loops. ALWAYS use the child safety tie down clip and make sure it is in place at all times and that it functions correctly.

The cords at the back of roman blinds are always exposed, thus ensure that children cannot reach them.

NEVER use roman blinds for a room where children might be left unsupervised (bedroom, playroom).



Parts Supplied

Components for Deluxe Headrail

Headrail

Metal brackets

Chain - metal as standard

Child Safety Device

a. For metal chain

b. For plastic chain



First remove from the headrail the brackets that have been provided. It is necessary that you press at the spring end in order to detach them from the headrail, as they are spring based.

Determine in which position the brackets will be fixed (top or face) and mark the placing of the screws on the wall before drilling the holes. The end brackets need to be spaced at a distance of approximately 8 cm from one another, and the rest of the brackets will be placed evenly between them, depending on the width of the blind.



Just clip the headrail back onto the bracket and the blind can now be operated.

Please make sure that the strings of the blinds are entirely equal should the blind not operate evenly.
In case they are not, they can be easily adjusted.
Untie each cord at the bottom, adjust then tie them back.



Ensure child safety! All blinds are delivered with back cord breakaway clips and tensioning mechanisms which need to be installed.

WARNING



make it safe



Installing the tensioning device
A. Place the Child safety mechanism along the side of the blind so that the control chain is no longer slack.
B. Mark the position and then fix the device in place with appropriate screws and wall plugs, if necessary.
NOTE: Make sure that the strands of the loop are no farther than 50mm apart when exiting the Child Safety Device.

For metal chain



For plastic chain

