


## Fitting Aluminium Venetian Blinds

### Supplied Parts

Swivel Brackets

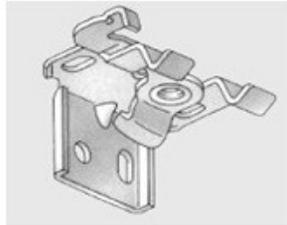


### Installation

Determine if your blinds require a face or top fix installation.



### Bracket installation

Place the brackets evenly along the designated line before mounting in order to ensure that the blind is properly supported.

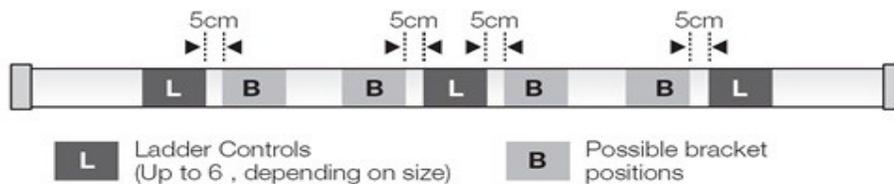


Please be aware that the end positions are essential and extra brackets will be supplied if the blinds surpass a certain width.

### Fitting the brackets


#### Face Fixing

Position the bracket accordingly so that the swing arm is facing you and mark where the holes are positioned. If mounting the blinds to the wall, use rawl plugs to screw the brackets firmly.

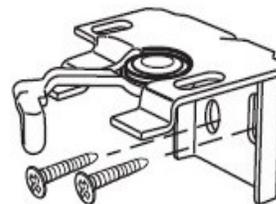

## Top Fixing


Measure the distance from any protrusions from the window or door frame, then mark the position of the brackets on the lintel and use the rawl plugs and screws to fix them firmly.

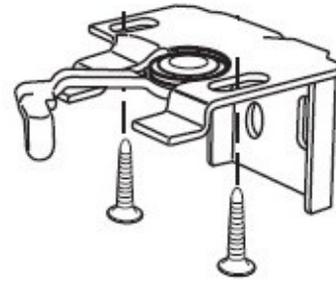

## Headrail installation

Pull the swing arm of the bracket counterclockwise to open and ease the front lip of the headrail into place before attaching the blind over the bracket. (A)

Push the swing arm clockwise to lock firmly while holding the headrail fixedly.

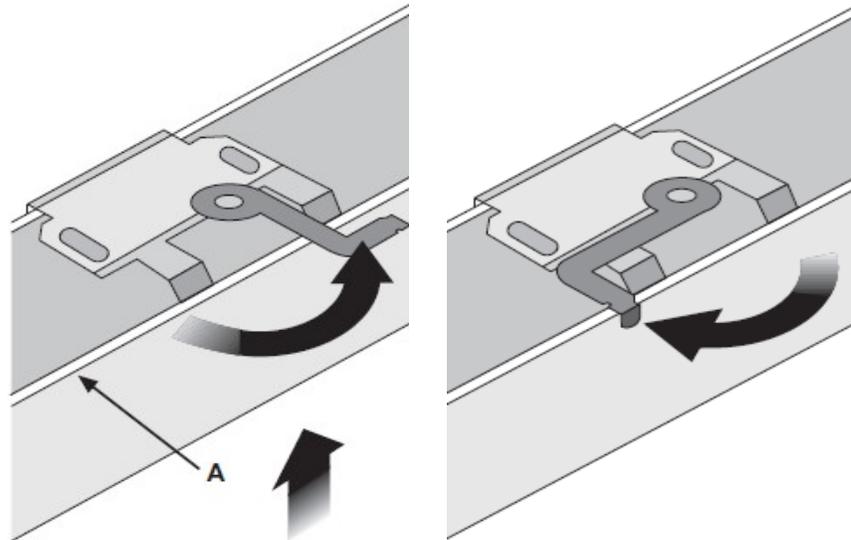

## Operation

Use the control cord (A) to raise and lower the blind and the wand (B) to tilt the slats.

**Observation:** A control cord is used for tilting in the case of 35 or 50 mm wide slats.

To raise the blind into your chosen position, pull the control cord downwards.

To lower the blind, release the cordlock by pulling the control cord across the face of the blind and letting it slide through your fingers.

To tilt the slats at your chosen angle, twist the wand.

**Observation:** Slats should be in the open position when operating the blind.

