


How to Install Decora Roller Blinds with Chain Controls


Note: The instructions below are intended for blinds with controls on the right. Please inverse all instructions for left hand positioned controls.

Decide on the position of the sidewinder.

Insert the chain in the sidewinder and pull it approximately 15mm towards its back as shown in the picture.

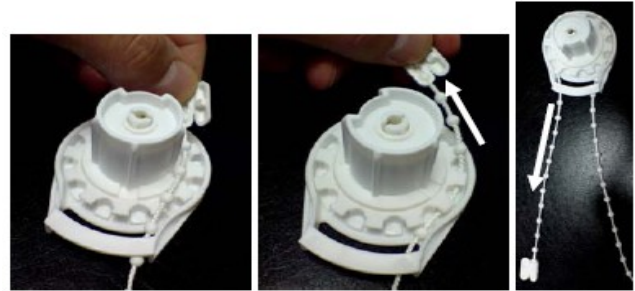

While handling with care the components, insert the sidewinder and the pin-end into the roller tube. Press them into place with care.

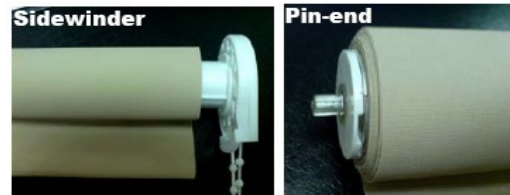

Offer the blind to the wall and mark the position of the brackets.

Fix the brackets to the wall and slide the sidewinder into the brackets. Open the pin-end bracket, insert the pin inside it and close it.



Setting the chain length

Decide on the proper length for the chain and cut it at the desired length using a pair of scissors. Place the cut end of the chain inside the coupling device and press firmly to close it.



How to Install Decora Roller Blinds with Spring Controls

Installing the Brackets

The brackets can be top, face or side fixed.

Decide on the position of the brackets by adding 38mm (the size of the brackets) to the width of the blind. Fix them into place.

Roll the fabric onto the tube and place the pin end side into the right hand bracket.



While ensuring the pin end does not come out of the right hand bracket by applying pressure on it, fit the spring end into the left hand bracket.

