

## Installation Instructions for Shutters

The hardware included in the box



Frame key




Screws to attach Hinges



Magnets

### 1. PUTTING TOGETHER THE SHUTTER FRAME

First join the corners of the frame using the frame key provided and slowly tap the key into place.

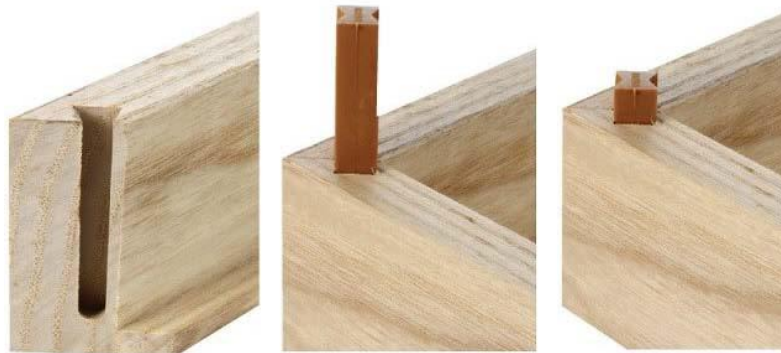

### 2. FRAME INSTALLATION

Please refer to initial measurement where the shutters will get installed inside or outside window recess.



**Inside Mount**




**Outside Mount**

i.) FOR OUTSIDE RECESS

A L type of frame will be provided for outside recess.

Fix the edges of the L frame around the recess, first secure one edge of the frame to the wall and then use a spirit level to make sure the L frame is absolute level and then fix the opposite edge.

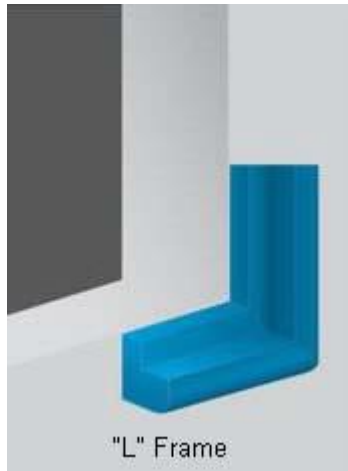

ii.) FOR INSIDE RECESS

This time a Z type frame will be provided unless L frame has been selected.

Please note: Check for door handles and other obstructions to make sure the L frame is installed away from and allow for the louvers to open and shut freely.




3. HANGING THE PANNELS

Sometimes the hinges come already screwed in all you need to do is to slide in the pins. Otherwise the hinges must get screwed in first by the installer.




Correct panels identification as per picture bellow is required before inserting the pins:


Single Panel

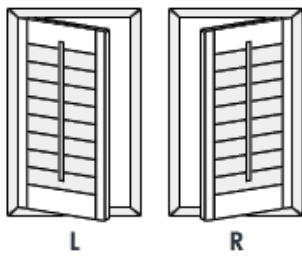

Double Panel

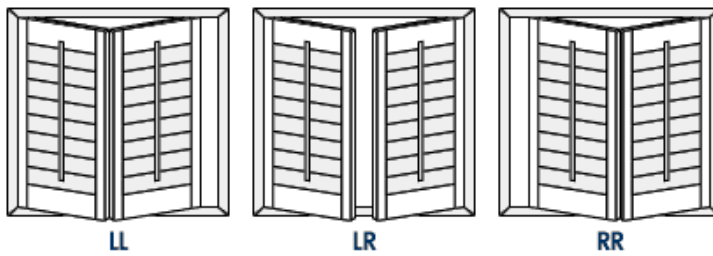

Four Panel

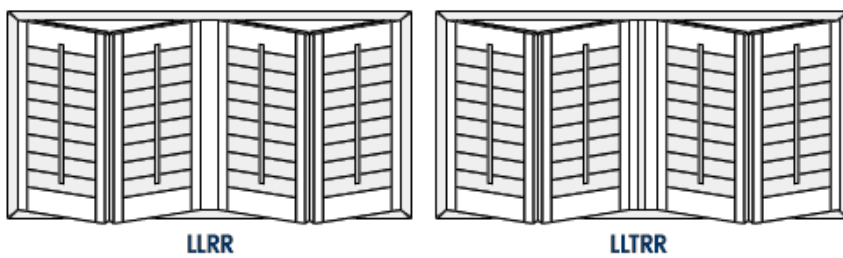

NOTE: The shutters will be delivered without predrilled holes in the frames and with no fitting screws.