


## Fitting instructions for uPVC Compatible Blinds

Our uPVC compatible blinds come fully tensioned from the factory.

Top and bottom tabs are designed to be fitted by having them slid between the glass and rubber gasket by applying pressure. Both glazing and gasket will remain free of damage in the process.

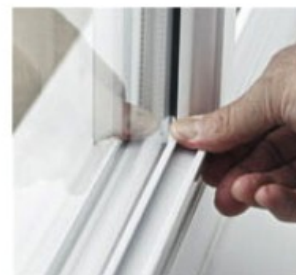

Place the top rail on the upper left corner of the window and slip it between the glass and the rubber gasket by pushing firmly, then slide the other end of the tab in the upper right corner of the window, as illustrated in the image above.

Repeat the process for the bottom rail of the blind.

The blind is now ready for use.